



World Leaders in Oil Spill Control Technology . . . Since 1960

**ASSEMBLY & OPERATING INSTRUCTIONS
FOR
HIGH CAPACITY ALUMINUM SKIMMER**

1. Remove the floats and head from the boxes.
2. Place the head on its back with the front raised about a foot.
3. Insert the struts from the floats into the slots provided on the bottom of the head, making sure that the tab on the side of the head is in the hole on the strut.
4. Insert the pin, attached to the strut, through the hole in the tab to secure the floats to the head.
5. Open or close the weir on the front of the head to the desired position. Open wide for thick slick, and close for thin slicks.
6. Place the head in the water with the adjustment rods pointing up.
7. Connect all of the hoses and fittings.
8. Start the pumps and allow them to achieve their operating speeds.**
9. The most efficient position is to raise the lip of the front weir plate slightly above the division between the oil and the water.

**The pumps must be running for proper adjustment to be achieved.

**Slickbar Products Corporation
18 Beach St.
Seymour, Connecticut 06483
(203) 888-7700 Phone (203) 888-7720 Fax**