


DIRECTION FOR ADJUSTING MANTA RAY SKIMMER HEAD

The skimmer head must lie flat on the water surface. Hose floats may be adjusted (see arrows) to maintain proper skimming level front to back and side to side. Adjust per Figure 1 while not pumping so that W/L is at top of slots, just under the top cover. Remove twist by loosening and retightening hose couplings. Be sure to use hose with two floats adjacent to skimmer head.

The lower W/L shown in Figure 2 shows the operating level of the skimmer. This change in W/L is caused by air entering the skimmer head with the oil.

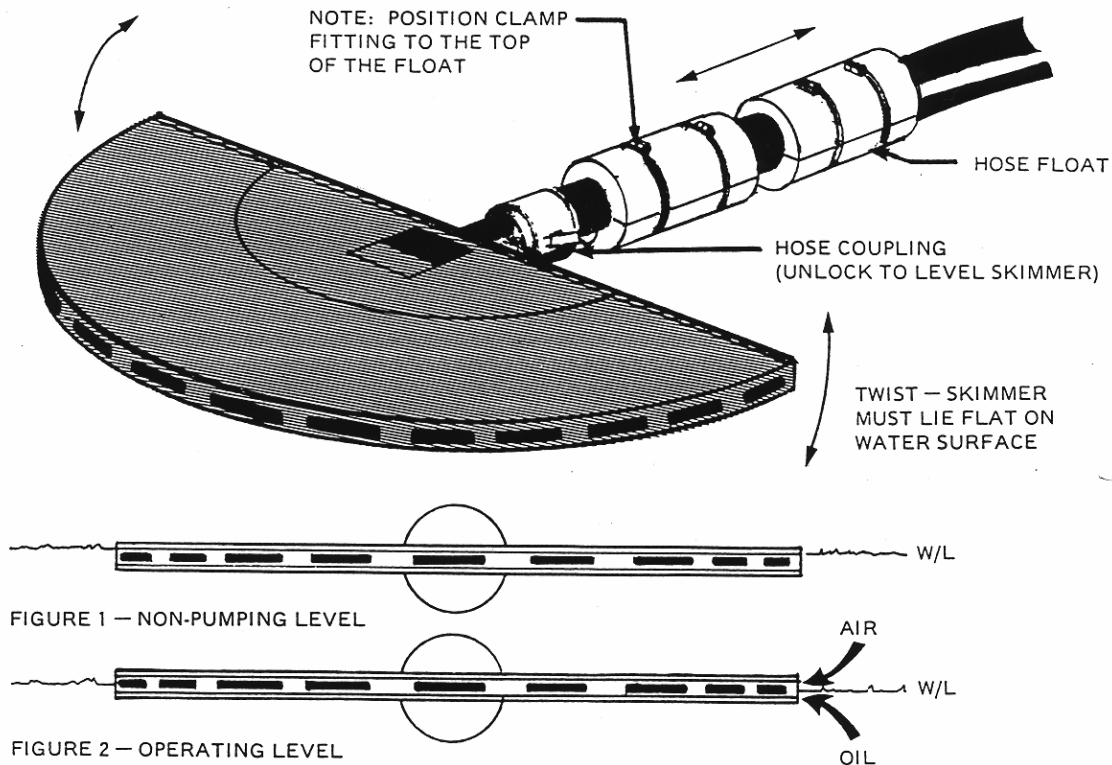

SKIMMER HEADS - CLEANUP & STORAGE

Fill a cleanup tray half full with cold water and add detergent. Clean both the inside and the outside of the skimmer head(s). For the inside a long, wire handled, soft brush can be used but be careful not to tear or gouge the rubber spacers inside. Rinse out the inside as well as possible and also the outside removing all detergent. Allow to dry thoroughly.

When storing a MANTA RAY Head it is very important that it be stored so that the head lies perfectly flat. Stored this way it will remain in operable condition. This prevents it from developing distortion which would give faulty performance in future use.